

ST181-LM4KA.12


Controller for cooling applications

Order number 900223.034

Old Id.Nr.: 127092



Wiring diagram

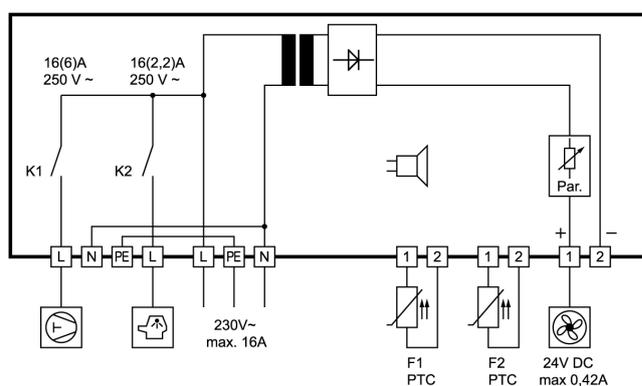

Product description

The cooling controller ST181-LM4KA.12 is a control unit specifically designed for 24V DC ventilation adjustment. The maximum ventilation power is 10W. The number of revolutions can be decreased to 20% and thus create a minimum air speed. Due to the galvanic separation of the ST181-controller the low-voltage ventilator can also be safely operated in a wet environment. The two switching outputs for 16A each (engine load max. 1HP) supply the compressor, lighting or other necessary exits.

Sensor: PTC

Range: -55...99°C





Front size: 180mm x 52mm

Panel cut-out: 159mm x 45mm


Tightness: Front IP65

Connector: Wieland terminal

ST 181...

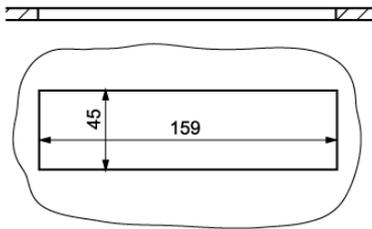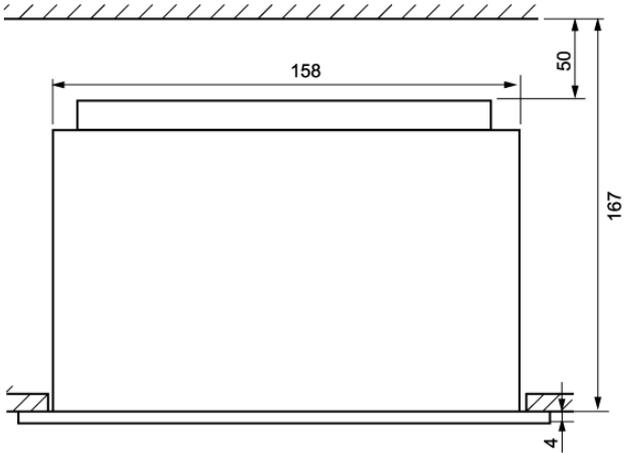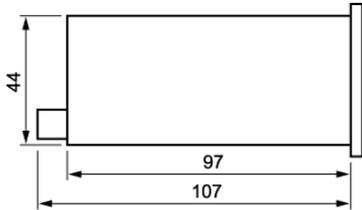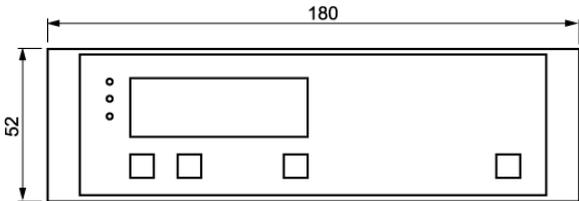

SOFTWARE .12

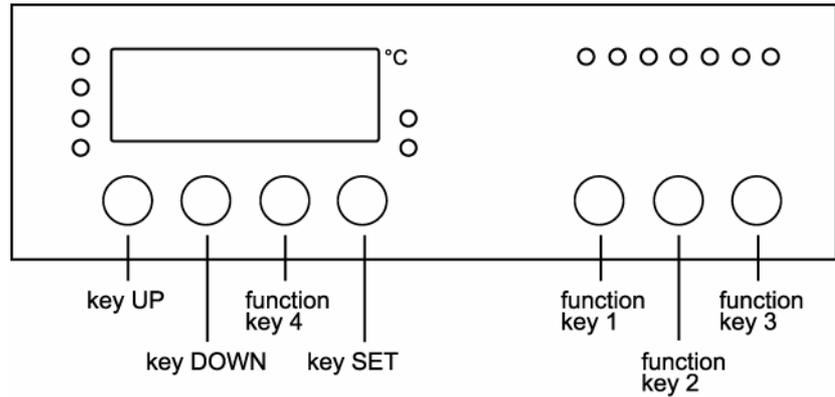

Adjustment options

- 

Key UP
Defrosting can be started any time by pressing the UP-key for 3 seconds. During the process of defrosting the respective LED is illuminated. The LED flashes if defrosting is requested, but may not be started yet due to interlock conditions.
- 

Key DOWN
The DOWN key, among other functions, can acknowledge an alarm. The internal buzzer is then switched off.
- 

Key SET
While SET key is pressed, the setpoint is indicated. In addition, the SET key is used for setting parameters.
- 

Function key 1 (if available)
Different functions are assigned to this key by help of parameters, see parameter b1. (Direct switching of a contact, setpoint indication thermostat 2). The key must be pressed for at least half a second.
- 

Function key 2
Different functions are assigned to this key by help of parameters, see parameter b2. (Direct switching of a contact, setpoint indication thermostat 2). The key must be pressed for at least half a second.
- 

Function key 3 (standby)
With this key the controller is switched to standby mode. Pressing the key a second time, restarts the unit. The key can be deactivated by setting the respective parameter, see parameter b3.

First control level:

Parameter setting for the main setpoint.

If none of the keys is pressed, the display indicates the actual value of the temperature. Pressing the SET key, the setpoint shows on the display.

If the setpoint is to be changed, the SET key is to be kept pressed while adjusting the setpoint with the keys UP and DOWN.

Please note that the setpoint can only be changed within the set setpoint limits.

General reference

Note that the value is transferred to the captive memory and is safe also after power failure.

Parameter	Function	Adjustment range	Standard setting	Customer setting
S1	Setpoint for refrigerating chamber, data record 1	r1...r2	2.0°C	
S2	Setpoint for refrigerating chamber, data record 2	r1...r2	2.0°C	

Second control level:

Setting of control parameters

The parameters can also be set in standby mode. Simultaneously pressing the UP and DOWN key for at least 4 seconds opens a parameter list containing frequently used parameters (the complete list of all parameters is to be found on the third control level).

With the UP and DOWN keys the list can be scrolled in both directions.

Pressing the SET key will give you the value of the respective parameter. Pressing also the UP or DOWN key at the same time the value can be adjusted.

Return to the initial position takes place automatically, if no key is pressed for 45 seconds, or by simultaneously pressing the UP and DOWN key for approx. 4 seconds.

Parameter	Function	Adjustment range	Standard setting	Customer setting
r0	Hysteresis for the compressor contact	1...15 K	2 K	
P2	Indication actual value of sensor F2	-		
PA	Access to parameter list of the third control level Password:: -19	-99...+99	0	

Parameter P2 is only indicated if P4 ≠ 0.

Third control level (all parameters):

Setting of control parameters

Access to the third control level is granted when selecting parameter PA on the second control level. Parameter PA is to be set at '-19'. Then the key UP and DOWN have to be simultaneously pressed for approx.. 4 seconds which will give access to the third control level, beginning with parameter P0. With the keys UP and DOWN you can scroll the list in both directions. Pressing the SET key will give you the value of the respective parameter. By pressing the UP or DOWN key at the same time the value can be adjusted.

Return to the initial position takes place automatically, if no key is pressed for 45 seconds, or by simultaneously pressing the UP and DOWN key for approx. 4 seconds.

Parameter	Function	Adjustment range	Standard setting	Customer setting
P0	Indication of actual value of sensor F1			
P1	Calibration sensor F1, actual value correction	-99...+99 K	0.0 K	
P2	Indication of actual value of sensor F2 (only available if P4≠0)			
P3	Calibration sensor F2, actual value correction (only available if P4≠0)	-99...+99 K	0.0 K	
P4	Evaluation of sensor F2	0: not evaluated 1: determination of the evaporator temperature	1	
P5	Indication mode	0: integrals 1: accuracy 0,5 °C 2: accuracy 0,1 °C	1	
P6	Display unit, indication in standby mode	0: Fahrenheit ("AUS") 1: Celsius ("AUS") 2: Fahrenheit ("OFF") 3: Celsius ("OFF")	1	
P7	Sensor type (applies to both sensors)	11: Pt100 2-wire 21: PTC 2-wire 22: PT1000 2-wire 22: NTC 2-wire	21	
P8	Software filter (applies to both sensors)	1: not active average value with : 2: 2 measuring values (0,6s) 4: 4 measuring values (1,2s) 8: 8 measuring values (2,4s) 16: 16 measuring values (4,8s) 32: 32 measuring values (9,6s) 64: 64 measuring values (19,2s)	8	
r0	Hysteresis for the compressor contact	1...15 K	2 K	
r1	Setpoint limitation (minimum)	-50 °C...r2	-50 °C	
r2	Setpoint limitation (maximum)	r1...+150 °C	50 °C	
c0	Start protection of the compressor after "cooling on"	0...240 min.	0 min.	
c1	Start protection after compressor start	0...240 min.	5 min.	

Parameter	Function	Adjustment range	Standard setting	Customer setting
c2	Start protection after compressor stop	0...240 min.	3 min.	
c3	Function in the case of error of sensor F1	0: compressor off 1: compressor on 2: emergency operation	0	
d0	Defrosting interval	0 = inactive, no defrosting 1...99 h	8 h	
d1	Defrosting mode	0: electrical 1: with hot gas	0	
d2	Defrosting temperature	-50...+150 °C	10 °C	
d3	Defrosting time limit	1...99 min.	30 min.	
d6	Indication of the refrigerating chamber temperature during defrosting	0: actual temperature 1: temperature determined just before the start of defrosting	1	
d7	Drainage time	0...15 min.	2 min.	
A0	Hysteresis for alarm	1...15 K	2 K	
A1	Minimum limit values	-99.0 ... -0.1 K 0 = inactive	-10 K	
A2	Maximum limit values	+0.1...+99.0 K 0 = inactive	10 K	
A3	Alarm suppression time after "cooling on"	0...240 min.	120 min.	
A6	Alarm suppression time after temperature alarm	0...240 min.	2 min.	
A7	Alarm suppression time after defrosting	0...240 min	15 min.	
A9	Switching sense alarm contact	0: relay on 1: relay off	1	
F4	Defrosting behaviour	0: ventilator off during defrosting 1: ventilator on during defrosting	1	
F5	Ventilator delay time after defrosting	0...240 min.	2 min.	
F7	Ventilator function at cooling operation	1: always on 2: on or off together with the compressor 3: on whenever the compressor is on and sensor F2 < sensor F1	2	
F8	Ventilator revolution number (data record 1) at normal cooling operation	0..100%	80	
F9	Ventilator revolution number (data record 1) at defrosting	0..100%	80	
F10	Kick-start	0..60s	0	
F11	Ventilator revolution number (data record 2) at normal cooling operation	0..100%	80	
F12	Ventilator revolution number (data record 2) at defrosting	0..100%	80	

Parameter	Function	Adjustment range	Standard setting	Customer setting
b1	Function key 1	0: no function 1: controller on/off (standby) 2: Setpoint ventilator revolution number (F8/F11) 3: relay directly, switched off in standby mode 4: relay directly, regardless of standby mode 5: actual value sensor F2 6: switching data record 1 and 2; after power-on data record 1 is active 7: like 6, after power-on the last data record is active additionally from version 1.50: 8: switching data record 1 and 2 (toggle key) 9: like 8, after power-on the last data record is active	6	
b2	Function key 2	see b1	0	
b3	Function key 3 (standby)	0: no function 1: controller on/off (standby)	1	
b4	Function key 4 (if available)	see b1	0	
b11	Function switching input E1 (if available)	0: no function 1: controller on/off (standby) 2: starting defrost 3: relay directly, switched off in standby mode 4: relay directly, regardless of standby mode	0	
b12	Function switching input E2 (if available)	see b11	0	
U1	Exit connection K1	0: no connection 1: connection to compressor 2: connection to defrost 3: connection to ventilator 4: connection to alarm 5: connection to thermostat 2 6: connection to function key 1, E1 or E3 7: connection to function key 2, E2 or E4 8: connection to buzzer 9: on, if controller on	1	
U2	Exit connection K2	see U1	2	
U3	Exit connection K3 (or internal buzzer, if available)	see U1	4	
U4	Exit connection K4 (if available)	see U1	0	
Pro	Program version			

Parameter description:

The following values can change the equipment characteristics and are therefore to be set with utmost care.

P0: Indication refrigerating chamber temperature F1

The here indicated temperature presents the sum of actual measured value of feeler F1 and the actual value correction according to parameter P1.

P1: Calibration refrigerating chamber sensor F1, actual value correction

This parameter allows the correction of actual value deviations caused for example by sensor tolerances or extremely long sensor lines. The regulation measure value is increased or decreased by the here adjusted value.

P2: Indication actual value of sensor F2

The here indicated temperature presents the sum of actual measured value of sensor F2 and the actual value correction according parameter P3.

P3: Calibration sensor F2, actual value correction

This parameter allows the correction of actual value deviations caused for example by sensor tolerances or extremely long sensor lines. The regulation measure value is increased or decreased by the here adjusted value.

P4: Evaluation of sensor F2

Sensor F2 can be used for the determination of the evaporator temperature (P4=1). If, in simpler refrigerant plants only the refrigerating chamber sensor is used, the feeler entrance for sensor F2 as well as its data recording (P4=0) can be deactivated here. Among other, parameter d2 has no meaning in the deactivated condition.

P5: Indication mode

The actual value can be indicated with different accuracy.
Actual values and parameter values are always set for highest accuracy.

P6: Display unit, indication in standby mode

This parameter allows display settings (°F or °C) and ("AUS" or "OFF") in standby mode.

P7: Sensor type

This parameter makes it is possible to adjust the feeler type of both sensors. Depending on the hardware not all sensor settings are possible.

P8: Filter

This parameter can determine by how many measured values an average value is to be formed.

r0: Hysteresis for the compressor contact

Parameter r0 sets the temperature margin between switching off and switching on of the compressor. A small hysteresis permits a more exact regulation, however also leads to more frequent switching of the compressor. The hysteresis is set one-sided above the setpoint.

r1: Setpoint limitation (minimum)

r2: Setpoint limitation (maximum)

These parameters limit the adjustment range of the setpoint S1, in order to avoid that the end user sets inadmissible values for the plant.

The entire adjustment range is equivalent to the maximum operating range of a PTC sensor.

c0: Start protection of the compressor after "cooling on"

After cooling is switched on (e.g. by switching on the mains voltage) the start of the compressor is retarded until the protection running time is over. This secures e.g. that several cooling units do not start at the same time and load the electricity supply net.

c1: Start protection of the compressor after compressor start

This time protection starts when the compressor is switched on. After switching the compressor off, a renewed switching on is impossible until this protection time runs out. This prevents from too frequent switching-on of the compressor and thus increases its life span.

c2: Start protection of the compressor after compressor stop

This time protection starts when the compressor is switched off. After switching the compressor off, a renewed switching on is impossible until this protection time runs out.

c3: Function in the case of error of refrigerating chamber sensor F1

Here is determined whether the compressor keeps running or not in the case of an error of the refrigerating chamber feeler F1. When deep-freezing, the compressor should normally continue running, in order to prevent de-frosting of the goods. At the normal cooling range above 0 °C, a continuation, however, could lead to frost damages.

In the operation mode "emergency operation" the compressor is switched on and off in 5 minute intervals. This results in a clock operation with 50 % cooling performance.

d0: Defrosting interval

The defrosting interval defines the time, after which a defrosting process is started. With the beginning of the defrosting process, the defrosting interval starts anew, which results in periodic defrosting in firm intervals.

Defrosting can also be started by pressing the key "manual defrosting" for at least 3 seconds. This automatically restarts the defrosting interval.

After switching-on cooling, the controller immediately initiates cooling and starts the first defrosting process after this interval.

d1: Defrosting mode

This parameter determines whether defrosting is effected by an electrical heating coil (d1=0) or by means of hot gas (d1=1).

d2: Defrosting temperature

The defrosting process is terminated when the evaporator has reached the adjusted temperature. (Always provide good thermal contact between evaporator sensors and lamellas).

In case that defrosting takes too long, the time limit set in "d3" will come into effect.

d3: Defrosting time limit

Here the maximal defrosting time can be adjusted. According to this time frame, defrosting is terminated even if the evaporator is not warm enough to be ice-free.

d6: Indication of the refrigerating chamber temperature during defrosting

It is to be assumed that the refrigerating chamber temperature slightly rises during the defrosting process. d6=0 indicates the actual refrigerating chamber temperature during the defrosting process. d6=1 indicates the temperature determined just before the start of defrosting until the setpoint of the refrigerating chamber is reached again after the defrosting process is completed. Thus, an irritation of the operator during defrosting can be avoided. In the case of emergency, the display flashes and the actual temperature of the refrigerating chamber is indicated.

d7: Drainage time

Completed defrosting is immediately followed by a drainage period, in order to let the evaporator drip off. During drainage time, the exits compressor and ventilator are switched off.

A0: Switching hysteresis for alarm

The hysteresis of the alarm contact is asymmetrically, set downward at the maximum alarm value upward at the minimum alarm value.

A1/A2: Minimum/maximum limit values

The limit values serve for monitoring of the refrigerating chamber temperature. They are relative, i.e. going along with the setpoint S1 of the refrigerating chamber. Alarm is released when exceeding maximum limit value or when falling below the minimum limit value:

The actual value display flashes, the buzzer (if available) goes off intermittently and the actual temperature of sensor F1 is indicated (if there is no sensor error).

At A1=0 or A2=0 the respective limit value alarm is inactive.

The buzzer can be turned off with the DOWN key, the display continues flashing until the alarm is turned off.

A3: Alarm suppression time after “cooling on”

After switching cooling on, an alarm is suppressed for the adjusted time, i.e. the refrigerant plant can get to work temperature without releasing alarm.

A6: Alarm suppression time after temperature alarm

If the refrigerating chamber temperature exceeds the limit values adjusted at A1, a2, normally a temperature alarm should be released.

With the suppression time set at A6 the alarm release can be delayed.

A7: Alarm suppression time after defrosting

Temperature alarm is avoided for the adjusted time after defrosting, in order to enable the plant to get back to the normal operating conditions (see A1, a2).

A9: Switching sense alarm exit

Depending on application, the alarm exit requires a normally-closed or a normally-open contact. At setting A9=1 the relay tightens in normal operation and opens in the case of emergency. That way also a voltage failure of the controller can be detected (relay dead = alarm) for an external alarm chain.

F4: Defrosting behaviour

At F4=0 the ventilator is switched off during defrosting.

At F4=1 the ventilator continues to run also during defrosting (normal cooling range above 0°C).

F5: Ventilator delay time after defrosting

Following drainage time d7, start of the ventilator can be delayed until the evaporator has sufficiently cold air again. If the ventilator is started immediately, the warm air resulting from the defrosting process would probably be blown into the refrigerating chamber.

F7: Ventilator function at cooling operation

At F7=1 the ventilator is always on (except for a defrosting process possibly, see parameter F4).

At F7=2 the ventilator is always on or off together with the compressor.

At F7=3 the ventilator is switched on whenever the compressor is on and the evaporator temperature (sensor F2) is below the refrigerating chamber temperature (sensor F1). The ventilator is switched off whenever the compressor is switched off, whereas parameter F5 is not active. In the case of sensor error the ventilator reacts as in the setting F7=2.

F8: Ventilator revolution number (data record 1) at normal cooling operation

Variable 1 for ventilator revolution number at normal cooling operation.

F9: Ventilator revolution number (data record 1) at defrosting

Variable 1 for ventilator revolution number at defrosting.

F10: Kick-start (in seconds)

If necessary, this is an option to set a time during which the ventilator starts with the maximum number of revolutions for stable operation. This parameter is only efficient, if the ventilator is newly started.

F11: Ventilator revolution number (data record 2) at normal cooling operation

Variable 2 for ventilator revolution number at normal cooling operation.

F12: Ventilator revolution number (data record 2) at defrosting

Variable 2 for ventilator revolution number at defrosting.

b1: Function key 1

b2: Function key 2

b4: Function key 4 (if available)

At setting = 0 the respective key has no function.

At setting = 1 the controller is switched to standby mode

At setting = 2 the key is linked with the function of parameter F8 or F11 (depending on active data record). If defrosting has started it is linked with parameters F9 or F12.

At setting = 3 a relay (indicated with parameter Ux) can be switched on or off directly with the key. In standby mode the key is locked and the corresponding relay switched off. After restarting the corresponding relay remains switched off.

At setting = 4 a relay (indicated with parameter Ux) is switched despite of the standby mode. The condition of the exit is maintained until the key is pressed again or until it is changed by an external switching entrance. After net interruption, the condition before power failure is re-installed.

At setting = 5 the actual value of sensor 2 can be indicated. At setting P4=0 the key has no function.

At setting = 6 the control is switched to data record 1 by additionally pressing the UP key and switched to data record 2 with the DOWN key. The data record switches the following parameters:

Description	Data record 1	Data record 2
Setpoint	S1	S2
Revolution number cooling operation	F8	F11
Revolution number defrosting	F9	F12

The actual setpoint can be displayed and adjusted by pressing the SET key. If only the ventilator revolution number has to be adjusted both data records must have the same setpoint.

Setting =7 corresponds setting =6 but the data record which was active before standby mode is activated again.

At setting =8 the control is switched to data record 2 only by pressing this key. Pressing it again switches back to data record 1.

Setting =9 corresponds setting =8 but the data record which was active before standby mode is activated again.

b3: Function key 3 (standby)

At setting b3=0 the function of the key can be deactivated.

b11: Function external entrance E1

b12: Function external entrance E2

Depending on existing hardware there are no or not all external entrances.

At setting = 1 the controller is switched to the standby mode.

At setting = 2 defrosting of both controllers is started.

At setting = 3 a relay (indicated with parameter Ux) is switched on or off directly. In standby mode it is locked and the relay is switched off.

At setting = 4 a relay is switched directly (indicated with parameter Ux) regardless of the standby mode. After net interruption the condition before power failure is re-installed.

U1: Exit connection K1

U2: Exit connection K2

U3: Exit connection K3

U4: Exit connection K4

Depending on existing hardware there may not be all output relays. This parameter assigns the respective relay to the internal controller exits, to function key 1 or 2, to one external entrance or the buzzer.

At setting =6 or =7 the relay is switched manually. It changes its condition with each pressure of the key and adopts the condition of the respective switching entrance whenever the latter changes. If the corresponding key or switching entrance has not been released for this function (see parameters b1, b2 and b11 to b14), the relay remains switched off.

The buzzer connection in its function is comparable to the alarm connection. The buzzer, however, can be switched off with the DOWN key.

Pro: Program version

This parameter shows the program version.

Status messages

Message	Cause	Error elimination
ON/OFF	Standby modus, no regulation	Switch on by key or switching input
Temperature indication flashes	Refrigerating chamber temperature beyond alarm limits (parameter A1, A2)	
E0 flashes	Refrigerating chamber sensor F1 error, break or short-circuit	Control sensor. Controller operates according to with parameter c3.
E1 flashes	Sensor F2 error, break or short-circuit	Control sensor. At setting [c3=1] the controller operates in timed defrosting modus (defrosting time as set in d3). At setting [c3=2] see parameter Y6.
EP	Data loss at parameter memory (basic contact 1 and 2 are dead)	If error cannot be eliminated by switching on/off, the controller must be repaired.

Error message E0, E1 and EP changes in the display with the actual value of sensor F1, unless the latter is defective. This happens independently from the selected indication mode. After the error is eliminated and confirmed with the DOWN key, the previously set indication mode becomes active again.

If there is a connection to the buzzer with parameters U1... U4, the buzzer can be switched off with the DOWN key.

Technical data of ST181-LM4KA.12

Measuring input

F1: Resistance thermometer PTC

F2: Resistance thermometer PTC

Measuring range: -50...+150 °C

Measuring accuracy: $\pm 0,5 \text{ K} \pm 0,5 \%$ at 25 °C, without sensor

$\pm 1 \text{ K} \pm 0,5 \%$ within operating temperature 0...+55 °C, without sensor

Outputs

K1: Relay, 30(6)A 250V~, normally-open contact, function see U1
permanent current max. 16(6)A, limited by connectors and/or conductive strips

K2: Relay, 16(2,2)A 250V~, normally-open contact, function see U2

S1: Voltage output for DC-Fan: 0..24V, max. 420mA (corresponds 10W)

Display

One 3-digit LED-display, 13 mm height, for temperature indication

Three LEDs, diameter 3mm, for status of the outputs (compressor, defrosting, fan)

Power supply

230 V +/-10 %, 50/60 Hz

power consumption max. 4 VA

Connectors

Wieland terminal

Ambient conditions

Storage temperature: -20...+70°C

Operating temperature: 0...+55°C

Relative humidity: max. 75% without dew

Weight

ca. 520g, without sensor

Enclosure

Front IP65, IP00 back (unit is open on backside)

Installation data

The unit is foreseen to be installed in an instrument panel.

Front size: 180 x 52 mm

Panel cut-out: 159 x 45 mm

Installation depth: ca. 165mm with connectors